

ASSEMBLY INSTRUCTION



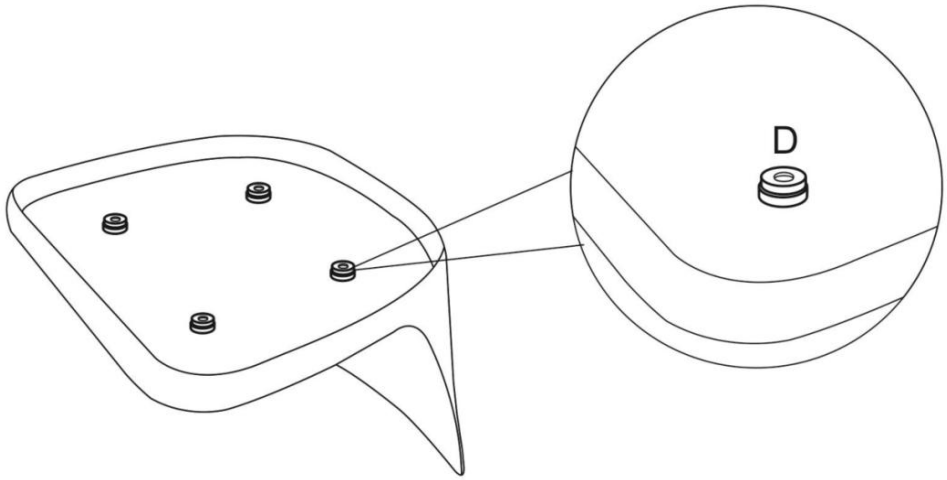

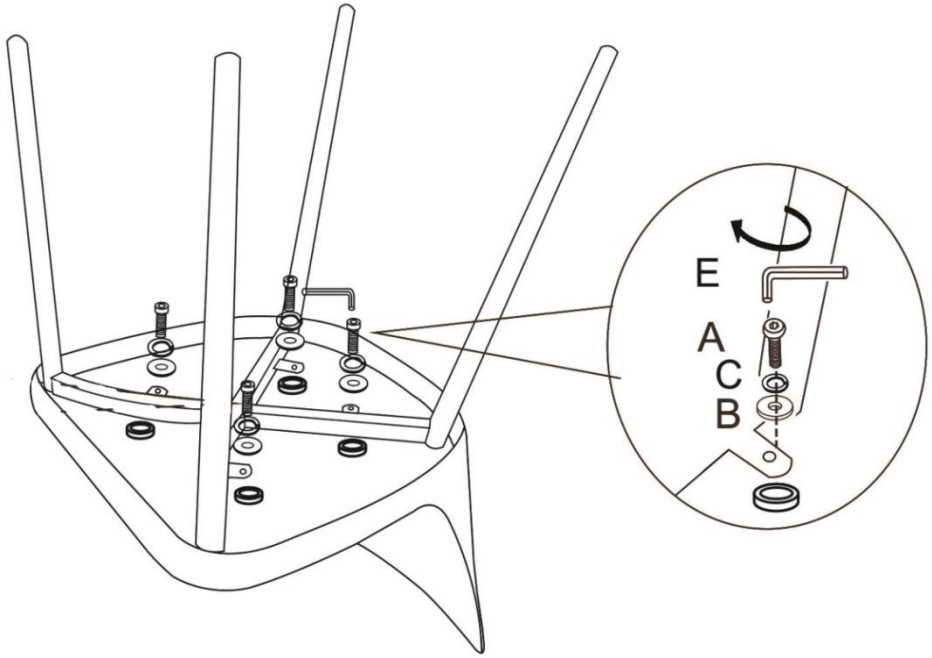

Ax4	Bx4	CX4	DX4	EX1	FX1	GX1
						