NOTICE DE MONTAGE

FAUTEUIL BERLIN


ASSEMBLY INSTRUCTION




ITEM	PART	NAME	QUANTITY
A		SEAT	1
B		METAL LEG(FRONT)	1
C		METAL LEG(REAR)	1
1		BOLT M6*35mm	2
2		LONG BOLT M6*45mm	4
3		ALLEN KEY	1

STEP 1:

STEP 2:

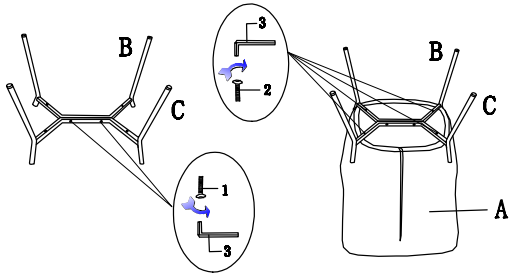

STEP 3:

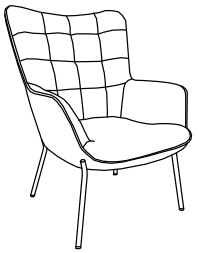

NOTE:
PLEASE PUT THE CHAIR ONTO A SOFT AND CLEAN SURFACE FOR ASSEMBLY.